

# EIRA

## User manual



2D (two directions) adjustable armrests  
3D (three directions) adjustable armrests




Seat height adjustment 120 mm



Backrest locking in 5 positions



Seat depth adjustment

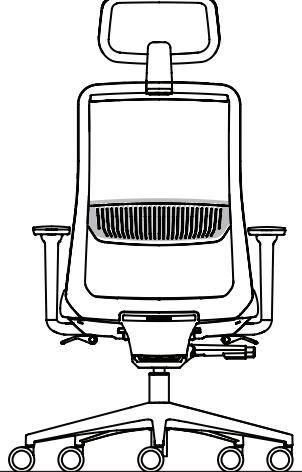


Height-adjustable lumbar support



60 mm  
run range



Height adjustment at the armrest carrier

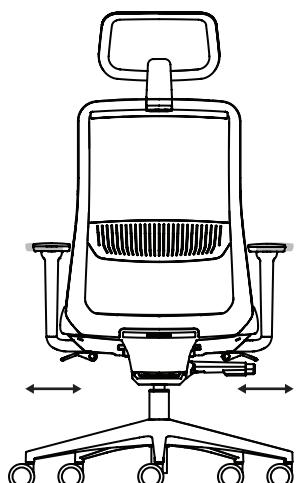


2D, 3D  
adjustable  
armrests

70 mm  
run range



Width adjustment via the armrest lever

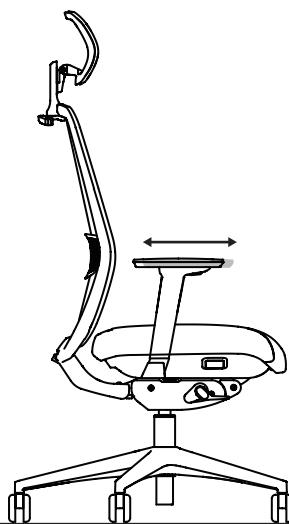

3D adjustable armrests




50 mm  
run range


Pad adjustment forward and backward



30 mm  
run range

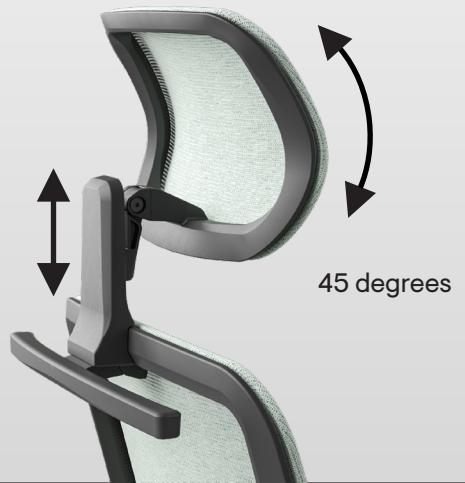

Headrest height and angle adjustment

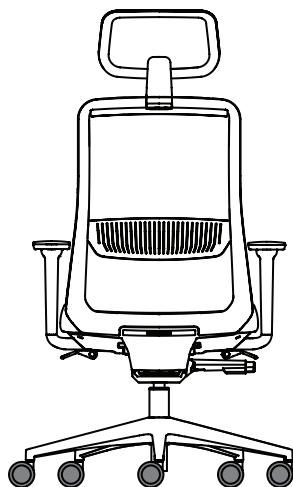

Self-braking castors



for soft floor



for hard floor

Note. Self-braking chair castors activate the integrated friction brake and stop moving when the chair is unused (no weight applied to the seat).

## Other documents available for this product

Technical information for EIRA task chairs  
NARBUTAS product care guide